



Vertex Quick Setup with EEE switch on phones

Instructions

1. Install a TP Link “dumb” switch between the “TO PHONES” on Vertex and the Cisco SG3500-10p switch. We recommend [TP-Link TL-SG105](#) for about \$14 from Amazon Link.
 - o This will remove the Energy Efficient Ethernet signal from the Cisco switch.

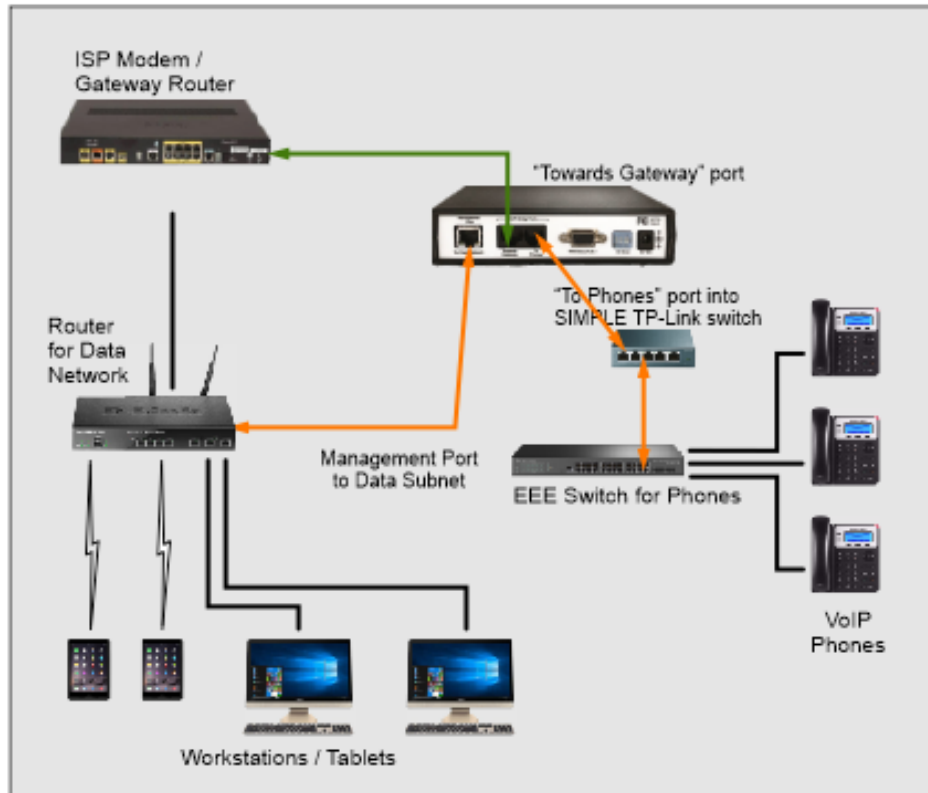

2. On the back of the Vertex, set the DIP Switch (#2 down all others up)

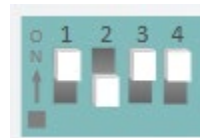

3. Power or re-power the Vertex using the plug on the back panel.
4. The following should appear on your POS software
 - o Number: 777-000-0000
 - o Name: Setup Mode On
5. Call 777-602-000 from a phone monitored by the Vertex. **THIS IS A NON-WORKING NUMBER: The call will not connect; we are only dialing so the Vertex device has a unique phone number to trace the route and get the Gateway MAC address**
6. The following should appear on your POS software
 - o Number: 777-602-0000
 - o Name: Setup Updated
7. Set the DIP switches back to their original position (all down in most cases).
8. Re-power the Vertex using the plug on the back panel. Device is ready for use.